

## INSTRUCTION MANUAL

# **HEADSET MICROPHONE**

YP-M301


Thank you for purchasing TOA's Headset Microphone.

Please carefully follow the instructions in this manual to ensure long, trouble-free use of your equipment.

# 1. GENERAL DESCRIPTION

The YP-M301 is a headset microphone designed to be exclusively used with an optional WM-1100 Portable Transmitter.

#### 2. NOMENCLATURE

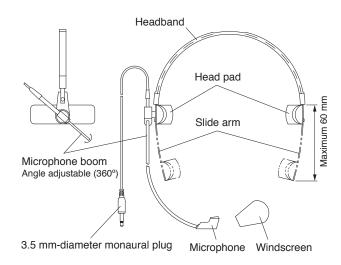

4. SPECIFICATIONS

Туре	Electret condenser type
Directivity	Unidirectional
Sensitivity	-46 dB (0 dB=1 V/Pa,
	1 kHz, load: 2 kΩ)
Maximum Input Sound	117 dB SPL
Pressure	
Terminal	ø3.5 mm monaural plug
Cord Length	1.2 m
Finish	Headband: ABS resin,
	black
Weight	45 g (cable included)

Note: The design and specifications are subject to change without notice for improvement.

### Accessories

Storage case	1
Windscreen (black)	2

### 3. HOW TO USE

- · Put on the headset and adjust the slide arms so that the head pads are positioned just over the ears.
- · Adjust a microphone boom, and position the microphone (windscreen attached) at the mouth.
- Keep the microphone 3 5 cm away from the mouth when using.
- · Speaking loud or positioning the microphone too close to the mouth could muffle sounds and make them inaudible.
- The headset is not recommended for use in aerobics or other vigorous performance applications.
- · Use the supplied case when storing the unit.

URL: http://www.toa.jp/